




tin the ribbon with solder



make sure you solder all 3 strands

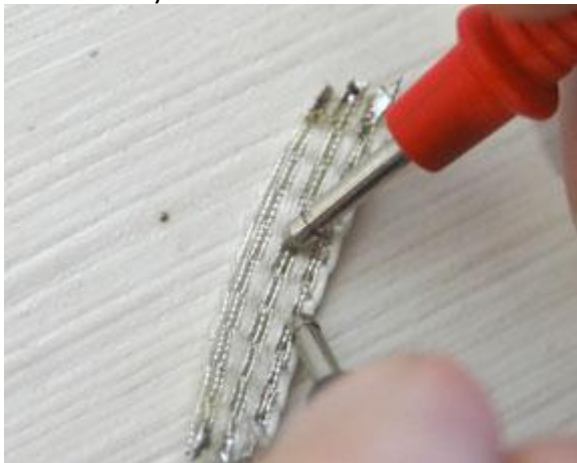


always check for shorts when you finish soldering



make sure your ribbon does not look "shorted" (strands touching each other)



tin the pads of the brick you want to attach the ribbon to

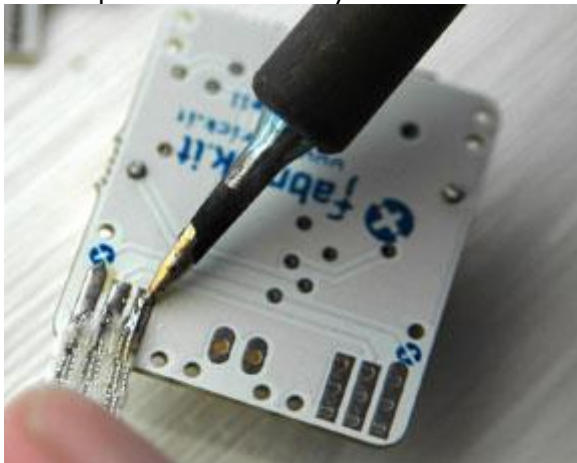

solder the ribbon on the pads



once you finish attaching the ribbon to the pads check for shorts!